

Contactors and Contactor Assemblies

3RT1 Contactors

SIRIUS



Accessories for contactors

Selection and ordering data



3RH19 21-1F...



3RH19 21-2F...



3RH19 21-1C...



3RH19 21-2C...



3RH19 21-1LA..



3RH19 21-1MA..

For contactors	Rated operational current ²⁾ NEMA A600 / Q600	Auxiliary contacts				Screw connection		Cage Clamp connection		Weight approx.	Pack.
		Ident. no.	Design			Order No.	List Price \$	Order No.	List Price \$		
Type			NO	NC	NO	NC				kg	

Auxiliary switch blocks for snapping onto the front acc. to EN 50 005

Sizes S0 to S12¹⁾

4-pole auxiliary switch blocks

	40	4	—	—	—					
3RT10 2,						3RH19 21-1FA40		3RH19 21-2FA40	0.065	1 unit
3RT1. 3 to	31	3	1	—	—	3RH19 21-1FA31		3RH19 21-2FA31		
3RT1. 7,	22	2	2	—	—	3RH19 21-1FA22		3RH19 21-2FA22		
3RT11	04	—	4	—	—	3RH19 21-1FA04		3RH19 21-2FA04		
	22 U	—	—	2	2	3RH19 21-1FC22		3RH19 21-2FC22		

Single-pole auxiliary switch blocks acc. to EN 50 005 and EN 50 012

	—	1	—	—	—					
3RT1. 2 to	—	1	—	—	—	3RH19 21-1CA10		3RH19 21-2CA10	0.015	1 unit
3RT1. 7,	—	—	1	—	—	3RH19 21-1CA01		3RH19 21-2CA01		
3RT11	—	—	—	1	—	3RH19 21-1CD10		—		
	—	—	—	—	1	3RH19 21-1CD01		—		

2-pole auxiliary switch blocks with cable entry from one side

• Cable entry from above

	—	1	1	—	—					
3RT10 2,	—	1	1	—	—	3RH19 21-1LA11		—	0.065	1 unit
3RT1. 3 to	—	2	—	—	—	3RH19 21-1LA20		—		
3RT1. 7,	—	—	2	—	—	3RH19 21-1LA02		—		
3RT11	—	—	—	—	—	—		—		

• Cable entry from below

	—	1	1	—	—					
	—	1	1	—	—	3RH19 21-1MA11		—	0.065	1 unit
	—	2	—	—	—	3RH19 21-1MA20		—		
	—	—	2	—	—	3RH19 21-1MA02		—		

EN50005 and EN50012 designate the markings of the auxiliary terminal numbers.
For position of the terminals see pages 2/166-169.
For int. circuit diagrams see pages 2/156-160.

1) Exception: 3RT16.
2) UL ratings, Appendix page 19/7.